
**INCHES** (MM)

## **ELECTRICAL**

MODEL	VOLTS	WATTS	AMPS	PHASE	FIELD WIRING GAUGE	TEMP. RATING
HT-327AF	208	3700	17.9	SINGLE	10 AWB Cu	90°C
HT-327AF	240	5000	20.6	SINGLE	10 AWB Cu	90°C

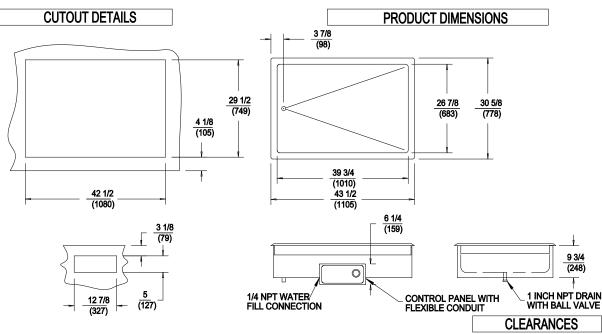

## INSTALLATION INSTRUCTIONS

## INSTALLER MUST MEET CONDITIONS OF ACCEPTABILITY OUTLINED BELOW UPON INSTALLATION:

1. Required installation clearances:
Wooden and Metal Installation: DO NOT install closer than
4 1/8 inches to front wall, 1 inch to back and side walls,
and 10 3/4 inches to surface below the unit.
2. Unit shall be accessible for servicing from the bottom.
3. If storage is to be used underneath the unit, it is
recommended that a baffle be placed 12 inches below
the unit to avoid contact with elevated temperatures.
4. For water and waste connections: This appliance is to be
installed to comply with the applicable federal, state or
local plumbing codes.

TO FABRICATE:
1. Lay out "cutout" dimensions on countertop and front

apron.
2. Lay out and fabricate control panel holes in counter apron using the control box as a template.
3. Cut out holes.

TO INSTALL:
IMPORTANT - DO NOT disconnect lead wires from the
Master Control Panel when making installation.


1. Tilt and pass Control Panel and electrical box through
the countertop cutout, then through the apron cutout.
Lower modular section into countertop cutout and

position.
RECOMMENDATION: Before final seating of modular section to countertop, apply a bead of silicone adhesive/sealant to the underside of gasket supplied on the mounting

Name 2. From underneath, insert screwdriver into slots in Wellslock frame and twist ears outward (clockwise) as required to secure flange tightly to countertop.

3. Mount Control Box to apron cutout as shown in drawing.

4. Mount Control Panel onto electrical box using the screws supplied.

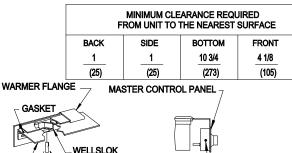

TO PLUMB:

1. A drain with valve is supplied on all units. Location of the valve handle is at the discretion of the fabricator (see drawing).

2. Connect 1" drain connection to a suitable drain line.

3. Connect 1/4 NPT flexible water fill line to solenoid valve in outlet box, maximum pressure 120 PSI, maximum temperature 120∞F.

TO WIRE:
1. Final connection is accomplished by bringing proper power supply leads (see 'WIRING REQUIREMENTS' label) through conduit knockout to terminal block supplied within the Master Control Panel. Check nameplates for voltage and phase.

SCREWDRIVER

COUNTERTOP

BAIN MARIE STYLE HEATED TANKS ARE DESIGNED FOR WET OPERATION ONLY.

A BACK FLOW PREVENTER IS INCORPORATED IN THE WATER FILL INE BETWEEN SOLENOID VALVE AND PAN. LOCAL CODES MAY REQUIRE AN ADDITIONAL VACUUM BREAK DEVICE, NOT PROVIDED BY WELLS.

EQUIPMENT IS TO BE INSTALLED TO COMPLY WITH ICABLE FEDERAL, STATE OR LOCAL PLUMBING AND TRICAL CODES.

1/4 NPT WATER