

Parts Catalog



GPC16 Pasta Cooker

PASTA COOKER

MODEL: GPC16

1-15-16

IMPORTANT!

TO EXPEDITE SHIPMENT OF PARTS, ALWAYS SPECIFY MODEL, REV,
PART NUMBER, AND SERIAL NUMBER OF PASTA COOKER.

GLOBE FOOD EQUIPMENT COMPANY

2215 East River Road
Dayton, Ohio 45439

Parts Department

Toll Free 1-800-745-6238 • Fax (937) 290-0585

E-Mail: info@globefoodequip.com


Website: www.globefoodequip.com

Not for resale

TABLE OF CONTENTS

	Page
Control Box Components	1 - 2
Base Components	3 - 4
Wiring Diagram	5

GPC16 CONTROL BOX COMPONENTS

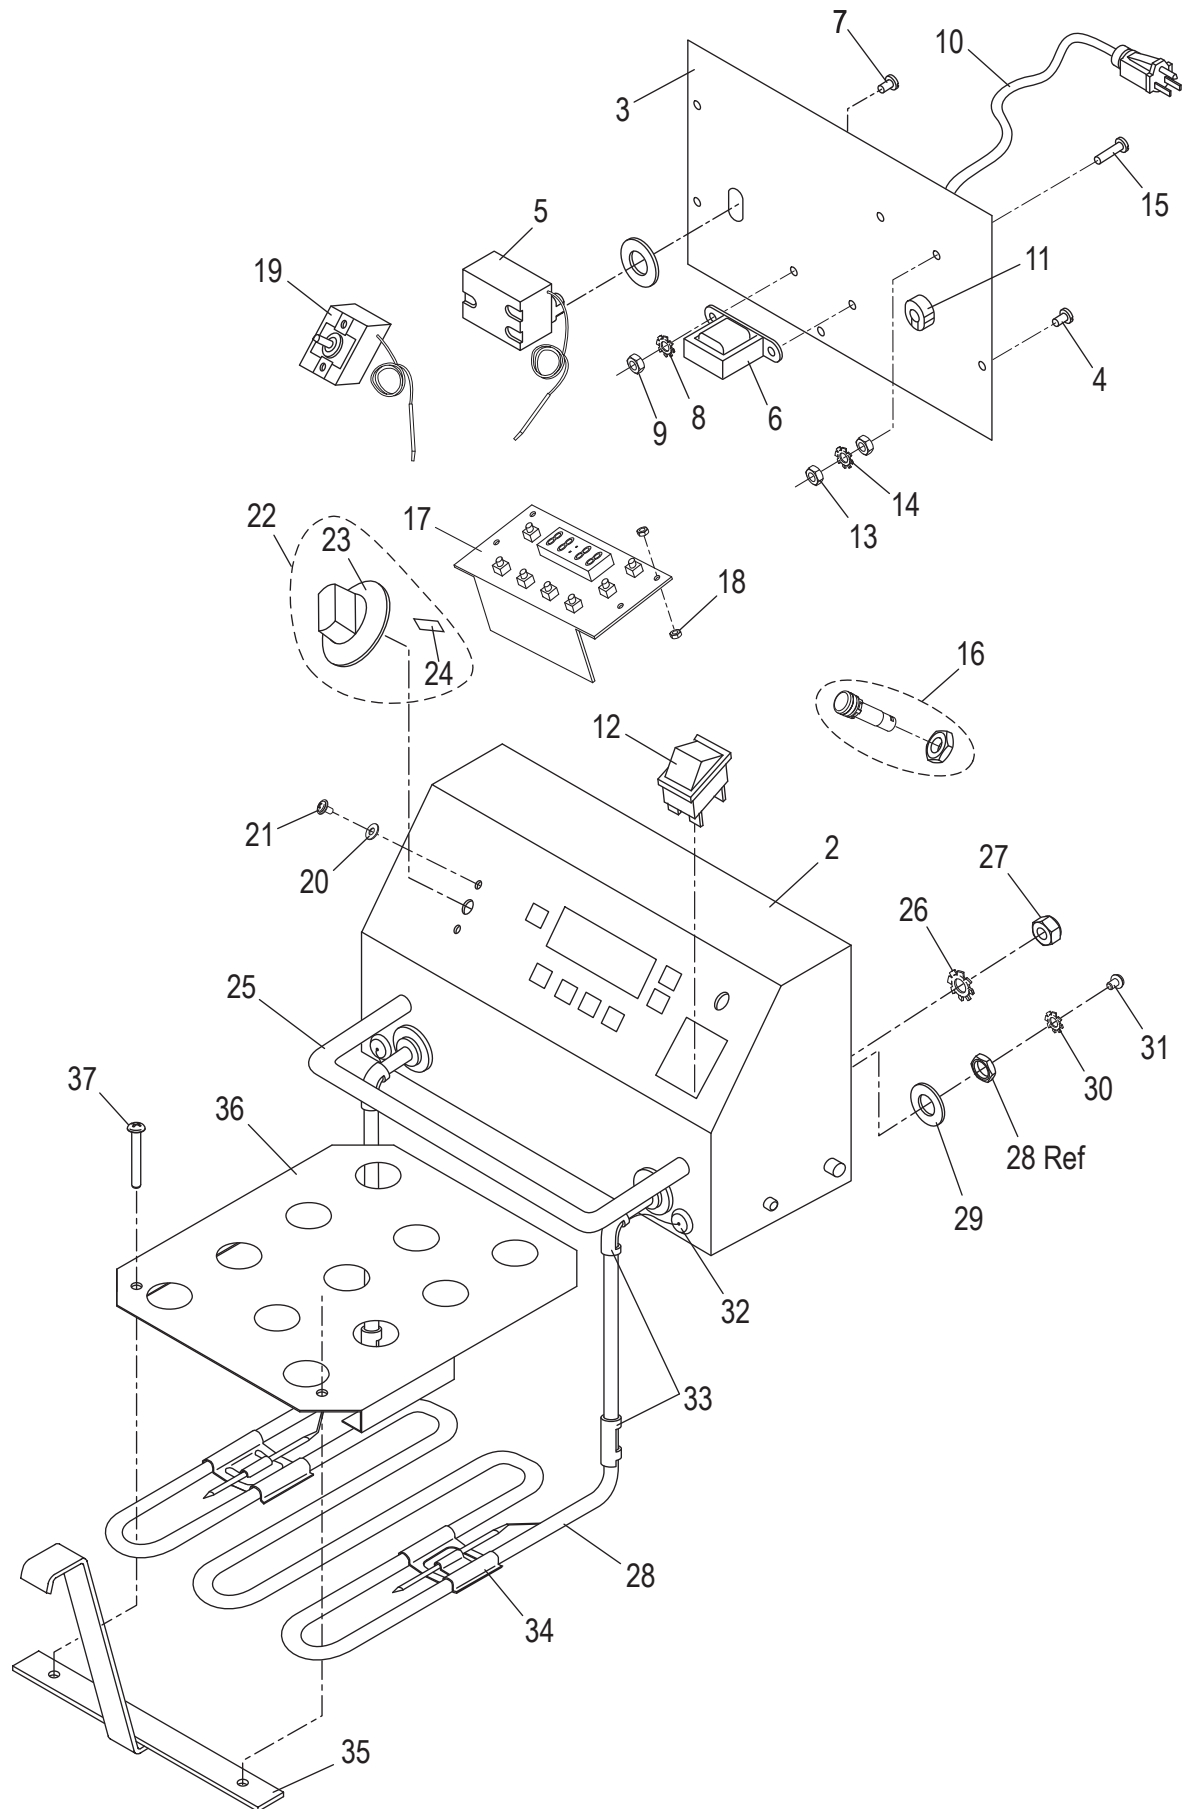

GPC16 CONTROL BOX PARTS LIST

Item	Description	Qty	Part Number	Standard Hardware
1	Control Box Assembly	1	U00576	
2	Control Box	1	-	
3	Back Cover	1	-	
4	Cover Screw	5	H00571	M4-.7 x 8mm Phillips Pan Head
5	Thermal Cut Out/Reset	1	U00577	
6	Transformer	1	U00578	
7	Transformer Mounting Screw	2	H00571	M4-.7 x 8mm Phillips Pan Head
8	Lock Washer	2	H00033	M4 Lock Washer, External Tooth
9	Hex Nut	2	H00034	M4 Hex Nut
10	Power Cord and Plug	1	U03021205013	
11	Strain Relief	1	U00579	
12	Power Switch	1	U03041215027	
13	Hex Nut, Ground Connection	2	H00034	M4 Hex Nut
14	Ground Washer	1	H00033	M4 Lock Washer, External Tooth
15	Ground Screw	1	H00031	M4-.7 x 16mm Phillips Pan Head
16	Power Indicator Lamp	1	U00581	
17	Timer	1	U03991290110	
18	Timer Mounting Nut	8	H00572	M2.5-.45 Hex Nut, Nylon
19	Thermostat	1	U00580	
20	Thermostat Washer	2	H00573	M5 Flat Washer, Nylon
21	Thermostat Mounting Screw	2	H00029	M4-.7 x 6mm Phillips Pan Washer Head
22	Knob Assembly	1	U01033	
23	Thermostat Knob	1	-	
24	Spring Plate	1	-	
25	Control Box Handle	1	-	
26	Handle Washer	2	H00033	M6 Lock Washer, External Tooth
27	Handle Mounting Nut	2	H00548	M6 Hex Nut, Nylon Insert
28	Heating Element with Nuts	1	U00582	
29	Heating Element Washer	2	U00591	
30	Element Connection Washer	2	H00033	M4 Lock Washer, External Tooth
31	Element Connction Screw	2	H00029	M4-.7 x 6mm Phillips Pan Washer Head
32	Sensor Bushing	2	U02121165001	
33	Sensor Wire Clamps (Set/2)	2	U01051025128	
34	Heating Element/Sensor Clip	2	U1051025117	
35	Element Handle Assembly	1	U00584	
36	Heating Element Cover	1	U00585	
37	Element Cover Screw	2	H00574	M4-.7 x 16mm Phillips Pan Head - SS

This exploded view diagram illustrates the components of a kitchen sink assembly. The parts are numbered as follows:

- 1**: The main sink basin.
- 2**: A mounting bracket for the sink.
- 3**: A mounting bracket for the faucet.
- 4**: A mounting bracket for the drain.
- 5**: A wire mesh strainer basket.
- 6**: A mounting bracket for the faucet.
- 7**: A mounting bracket for the drain.
- 8**: A mounting bracket for the sink.
- 9**: A flexible drain hose.
- 10**: A mounting bracket for the faucet.
- 11**: A mounting bracket for the drain.
- 12**: A faucet handle.
- 13**: A mounting bracket for the faucet.
- 14**: A mounting bracket for the drain.
- 15**: A mounting bracket for the sink.
- 16**: A mounting bracket for the sink.

GPC16 ELECTRICAL BOX PARTS LIST

Item	Description	Qty	Part Number	Standard Hardware
1	Pasta Cooker Base	1	-	
2	Electrical Box Mtg Bracket, RH	1	-	
3	Electrical Box Mtg Bracket, LH	1	-	
4	Bracket Mounting Screw	4	H00575	M4-.7 x 10mm Hex Hd
5	Pan	1	U00586	
6	Pan Washer	2	H00014	M6 Flat Washer
7	Pan Mounting Nut	2	H00020	M6 Hex Nut
8	Pan Gasket	1	U00587	
9	Corrugated Tube with Nuts	1	-	
10	Pan Flange	1	-	
11	Pan Drain Seal	1	-	
12	Drain Spigot	1	U00588	
13	Spigot Washer	1	U00599	
14	Spigot Nut	1	U00600	
15	Adjustable Foot	4	U01021005002	
16	Basket	2	PASTABASKET	
		4	MINIBASKET	

GPC16 Wiring Diagram, 208-240V

